

2.7kV

5.4kV

2.2kV

10.8kV

1.8kV



FLECTRIC FENCE **VOLTAGE TESTER**

- 1: Attach clip to ground (eg fence post).
- 2: Touch probe to fence (high tension). 3: Hold tester in other hand with thumb

on voltage control at maximum. Adjust until neon lights then

> read voltage from scale on control.