
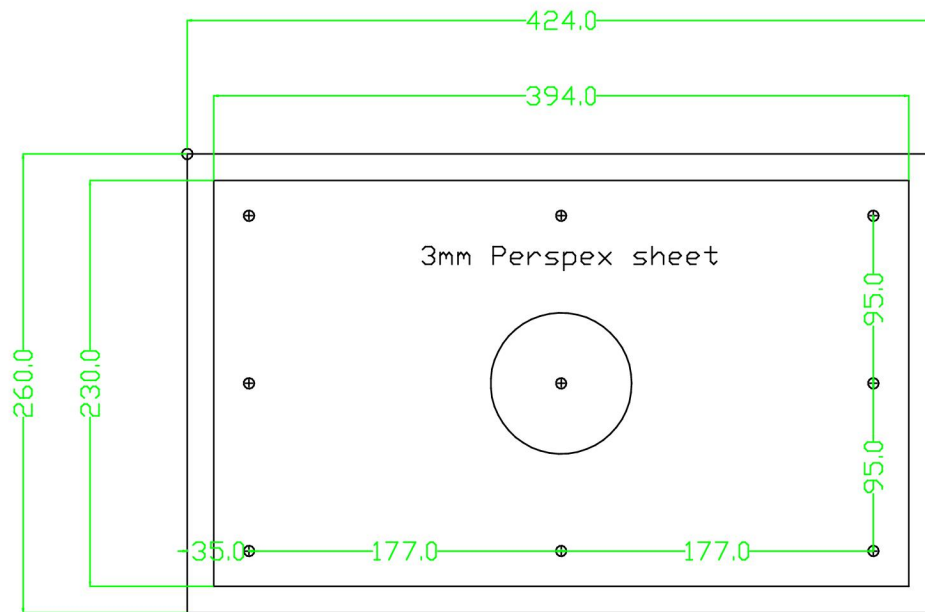
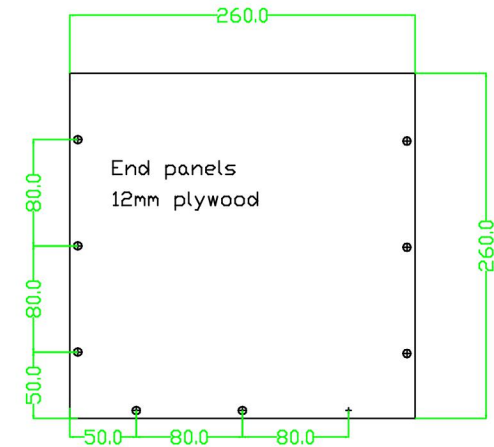
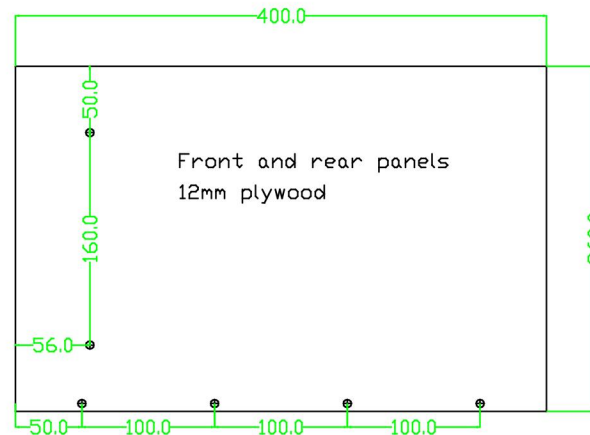



6mm long, 3mm threaded nylon spacers (altronics H1342)

M3 machine screw, 6mm long

M3 crinkle washers top and bottom

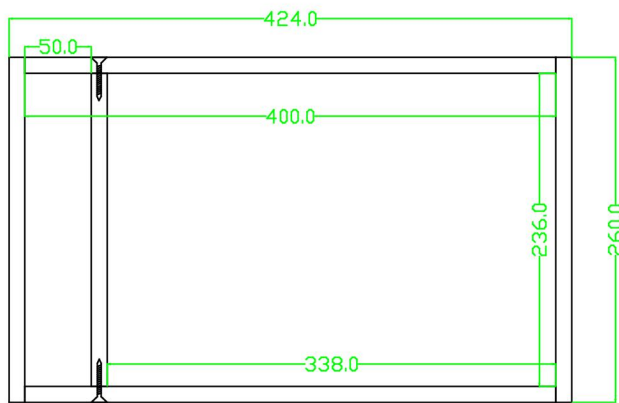

Drill panel 4mm hole and countersink
All screws 32mm by 8G
Drill 3mm pilot hole into timber to full depth of screw
pilot hole required to ensure the panel does not split

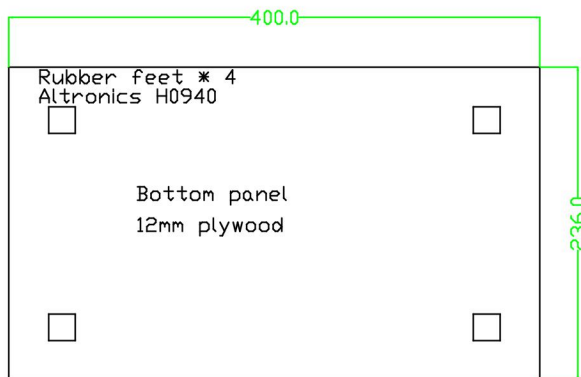

Note the internal baffle is shorter
to make room for the double layer lid

